


Battery fuse

▶ A DEMOUNT



A0. Prepare the tools.

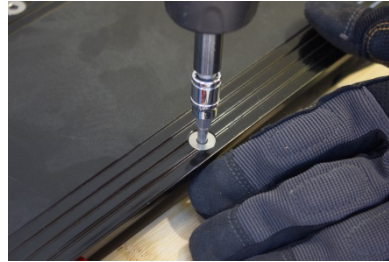

A1. Release 8 screws of foot deck.(by using H3 hex driver)



A2. Check the orientation of the battery. Barcode should be on the top.



A3. Lift up the battery, then you will see all connectors connected to the battery.

You don't have to take the battery out of the scooter.
And if there is charging problem, you could skip to B1 step.

▶ **B**
check fuse



B0. Pickup the connector with fuse box labeled '1.Load' . Then take out the fuse and check whether it is broken. If so please replace with a new one.



B1. Pickup the connector with fuse box labeled '6.Charge' . Then take out the fuse and check whether it is broken. If so please replace with a new one.

