


# Configure top speed



1. Open the foot deck using a hex driver (8 screws).



2. Identify 3 pairs of connectors with matching colors (labeled kick-start, 12.5 mph, and 7.5 mph) near the rear wheel wire.

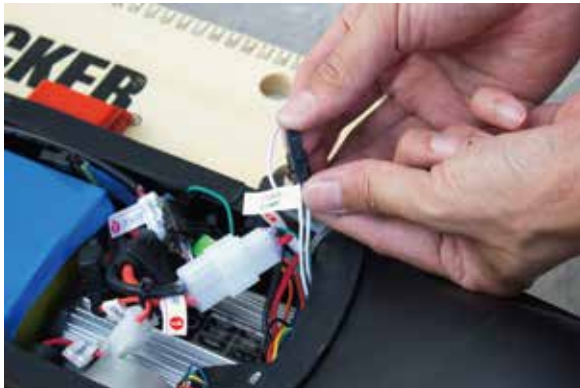

### 3. Configure the top speed:

- Once connecting the 2 ends of the 12.5mph wire, you would configure the top speed to be 12.5 mph.
- You can set the top speed at 7.5mph if you connect the 2 ends of the 7.5 mph wire.
- To disable the top speed limit, disconnect the connectors. Will be set to 20 mph by default



4. Organize the cable, put back the deck and secure the screws. **Done.**