


How to replace the battery

▶ A DEMOUNT



A0. Prepare the tools.

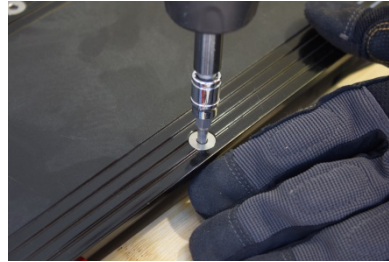

A1. Release 8 screws of foot deck.(by using H3 hex driver)



A2. Check the orientation of the battery. Barcode should be on the top.




A3. Lift up the battery, then you will see all connectors connected to the battery.



A3. Cut off all the cable ties on the connectors. Disconnect the connectors with the following labels: 1.Load, 5.Display and 6.Charge. Then take out the battery to change another new one.

▶ B

INSTALL

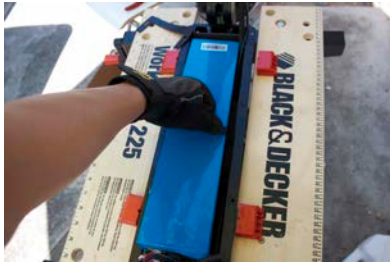

B0. Put the new battery into the scooter. And there are some rubbers to stabilize the battery in the scooter.



B1. Connect all three connectors (1.Load, 5.Display and 6.Charge.).



B5. Screw the foot deck on.
Installation is done.